

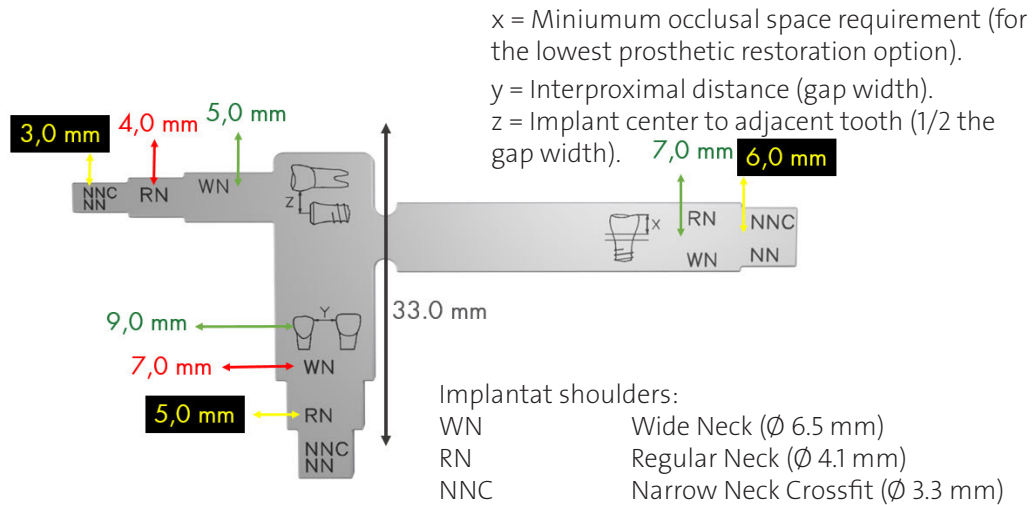


# Straumann® Diagnostic® T


## Planning aid

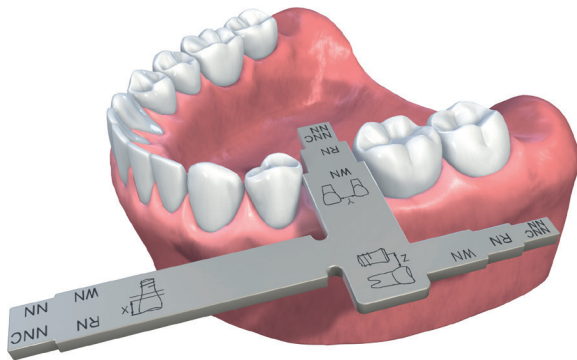

Minimum vertical space requirement for access with surgical instruments.

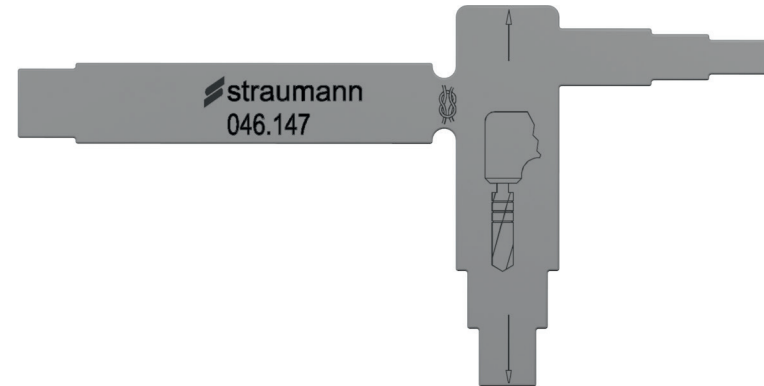

Determining the implant shoulder diameter in a single tooth gap.

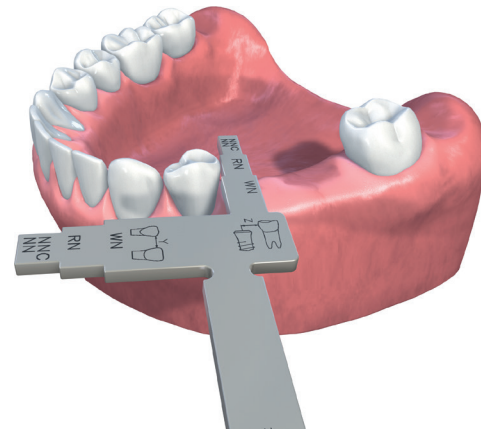

Determining the minimal distance between implant axis and adjacent teeth.